
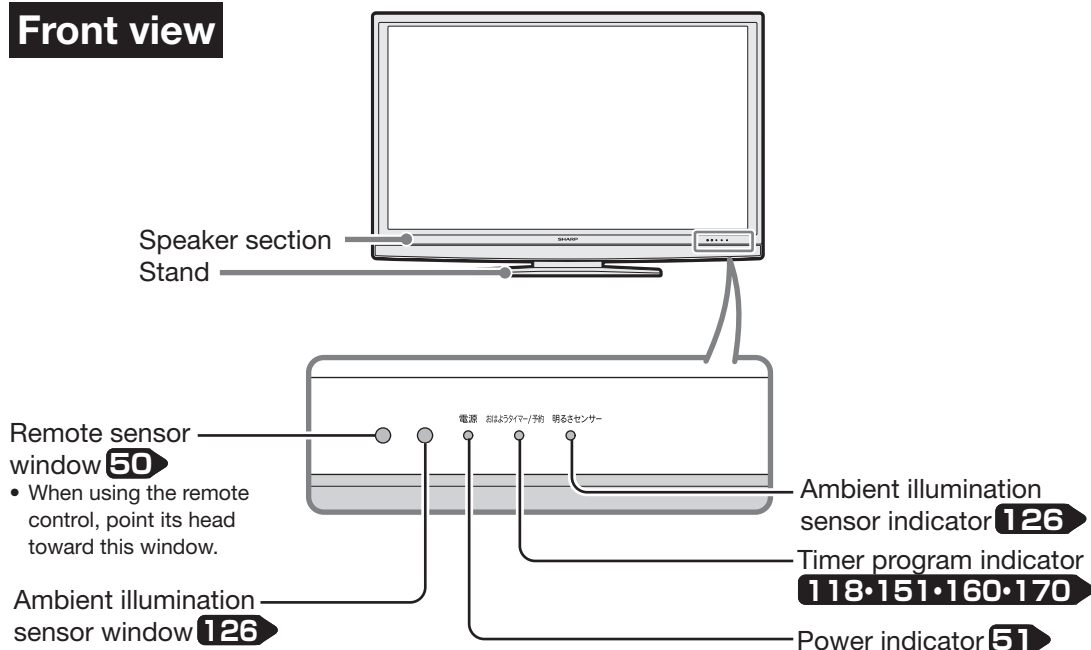


English Guide

Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

Front view




Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Control panel

Right side view

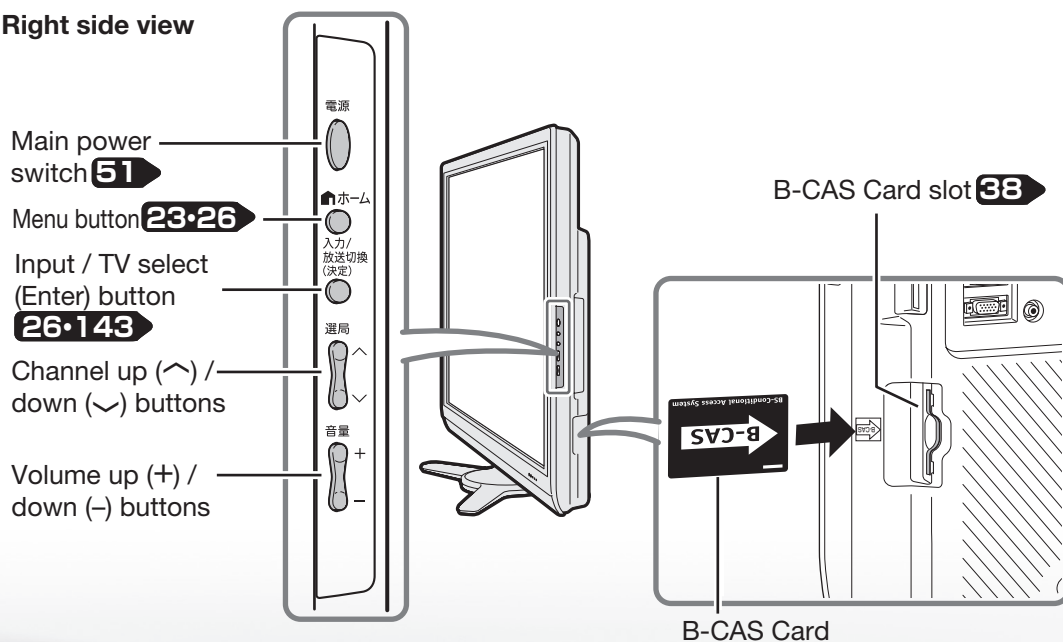

Back view

The illustrations below are those of LC-52AE7.

LC-46AE7/LC-40AE7 has almost the same layout of jacks and terminals as LC-52AE7.

LAN jack

(10BASE-T/100BASE-TX)

212

Connect a Blu-ray Disc player,
AV amplifier, etc.

AV in 1 and 2 (HDMI)

**44・141・142・
163・178・184**

AV in 6

141・154・178・182

AV in 4


44・141・178

RS-232C

196

AV in 7 (PC)

185

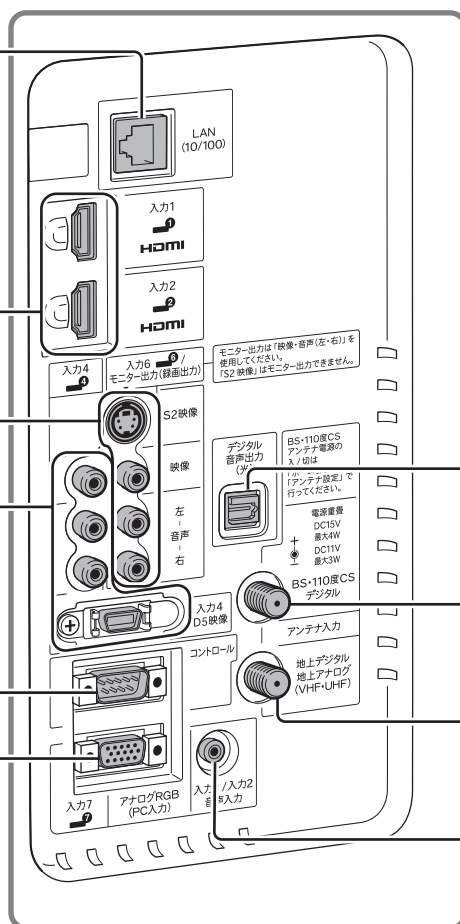

Digital audio
output jack
(optical)

163・180

BS-CS 110 antenna
input terminal

41~43

VHF-UHF antenna
input terminal

40~43

PC input (audio)

184・185・190

AV in 3 (HDMI)




**44・141・142・
163・178・184**

AV in 5

44・141・178

Connect a video
game equipment,
video camera, etc.

Headphones jack

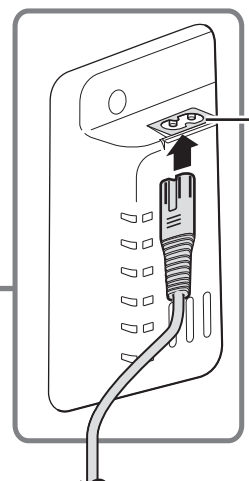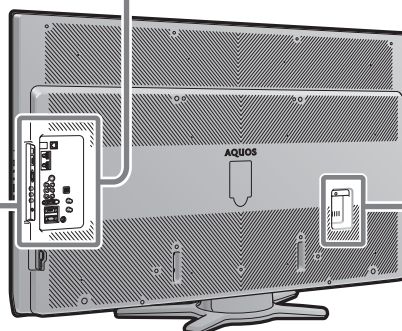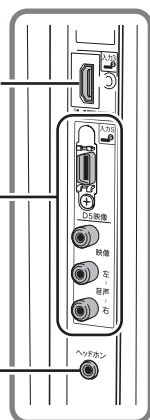

Connect the AC cord

AC cord connector
(AC 100V) **45**

The provided power
connector may have
different shape from that
shown in the drawing.

はじめに

準備

番組を見る

録画と再生

ファミリンク
で録画・再生

ゲームオーディオ
パソコンをつなぐ

本機をさらに
活用する

インターネット
を楽しむ

インターネット
で番組を楽しむ

写真の表示・
音楽の再生

故障かな？仕様
寸法図など

English
Guide

Remote Control Unit

Active/Standby **51**

Press to engage the TV set in the active or standby mode.

SAVE mode **203**

Press to change to the SAVE mode.

Digital channel number input **86**

Use to select a digital channel by entering the 3-digit channel number.

CATV **87**

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10).

Mute **83**

Press to mute audio.

Volume up (+)/down (-) **83**

Press to adjust the volume.

Linked data broadcast **113**

Press to call the data broadcast linked with the current digital TV program.

AV mode select **124**

Press to select the picture/sound setting that best matches the current program.

Sleep timer **205**

Press to select the remaining time period after which the TV set automatically enters the standby mode.

Familink **176**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

EPG **90**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

Display the "Home" Menu **26**

Press to start some useful operations of the TV.

Program info **114**

Press to display detailed information on the current digital program.

Finish **53 · 177 · 219**

Press to finish menu operation, etc.

Screen mode **121 · 186**

Press to select the desired screen mode.

Freeze **113**

Press to freeze the picture.

Familink **168 · 171~175**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

Recommended programs select **94·95**

Press to select a program which the TV set recommends.

Display **84**

Press to display or turn off the channel call, etc.

Internet **218·238**

Press to connect to the internet.

VOD **247 · 252**

Press to display the VOD control panel.

Channel select **83**

- Press to select a channel.
- Use to input a number for various settings.

Terrestrial digital select **82**

BS select **82**

CS select **82**

Terrestrial analog select **82**

When selecting the CS digital channel for the first time. **57**

Channel up (^)/down (v) **83**

Press to select channels in the ascending or descending order.
*CATV channels are factory set to be skipped. **75**

Input select **143**

Press to select the input.

Display the Tool Menu

Cursor (up, down, left, right) **26**

Use to select a menu item, column, etc.

Enter/Confirm **26**

Press to confirm a selected setting or menu item.

Return **26**

Press to go back to the previous screen.

Color **92 · 93**

Use to operate EPGs and data program screens.

Picture select **105**

Press to select the desired picture when watching a digital multi-picture program.

Caption **105~107**

Press to display, select, or turn off captions when watching a digital program with captions.

Audio select **104 · 105**

Press to select the audio.

Media select **82**

Press to select the media (TV or data).

Split screen **108**

Press to switch between the split screen mode and the normal screen mode.

Operable screen **109**

Press to switch the operable screen when the TV set is in the split screen mode.

To open the cover

Hold the cover by the projections on both sides and lift upwards.




Switching the Display Language to English


ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。

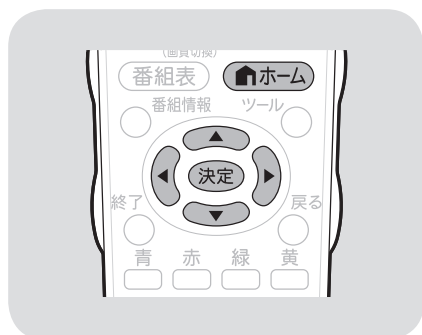

誤ってホームメニューを英語にしまったときは

- ・ ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Press




and select with



Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ

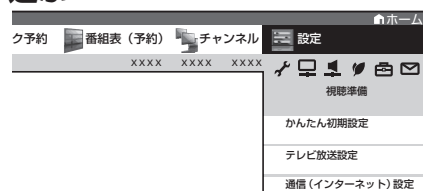


2

Select with



Select “ (視聴準備)” (View Setting).

 (視聴準備) を選ぶ

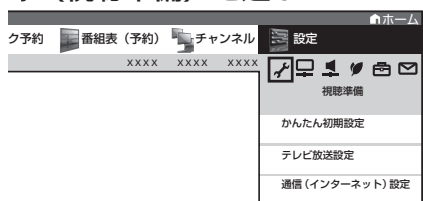

3


Select with



Press



Select “Language (言語)”.
「Language (言語)」を選ぶ

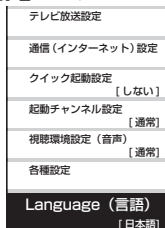

4


Select with



Press



Select “English”.
「English」を選ぶ
決定する

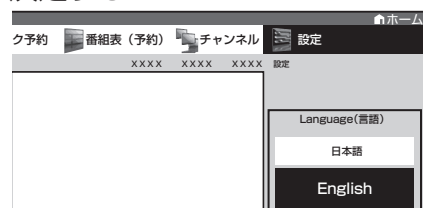

- ・ The menu screen is now displayed in English.
- ・ 画面表示が英語になります。

5

Press



Finish this operation.
終了する

はじめに

準備

番組を見る

録画と再生

ファミリンク
で録画・再生

ゲームオーディオ
パソコンをつなぐ

本機をさらに
活用する

インターネット
を楽しむ

インターネット
で番組を楽しむ

写真の表示・
音楽の再生

故障かなど
寸法図など

English
Guide